
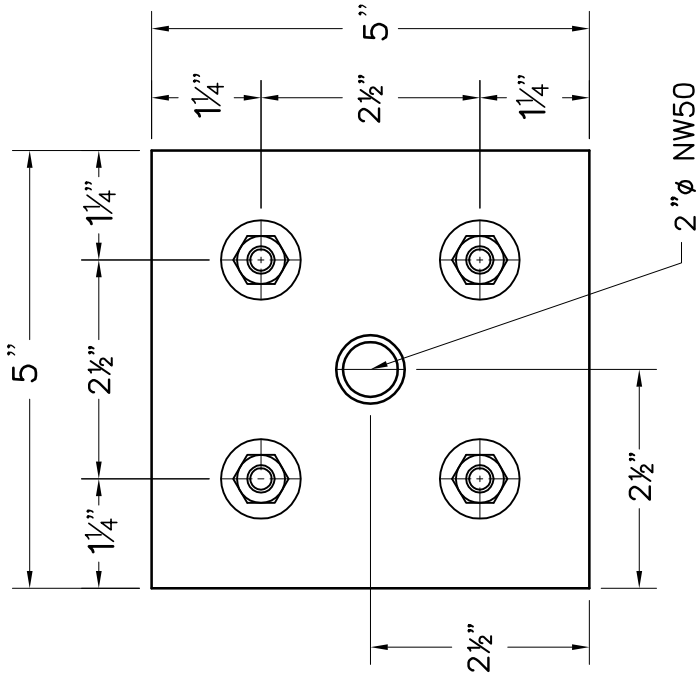



INSTALLATION:

- CUT 4"x4" HOLE IN HOST DUCT
- APPLY 1/4" GORTEX GASKET ON BOTTOM PLATE
- INSERT BOTTOM PLATE WITH STUDS
- APPLY TOP PLATE & TIGHTEN (4) 1/4-20 NUTS TO 75in#

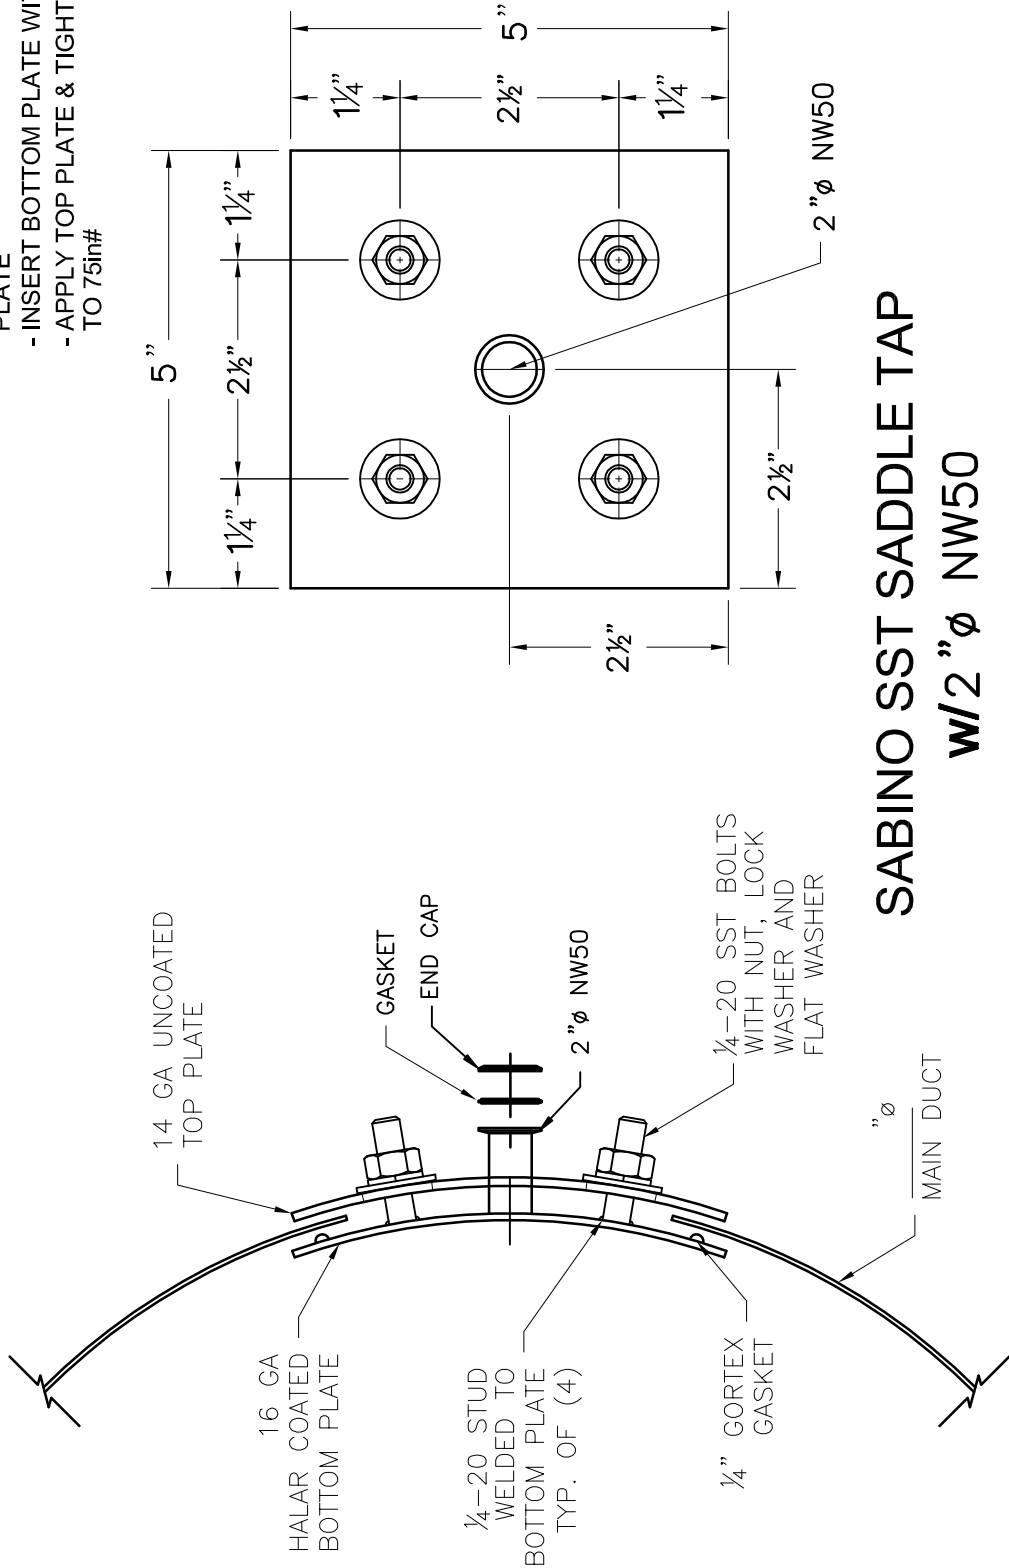

SABINO SST SADDLE TAP
W/ 2" ϕ NW50

QTY. ()

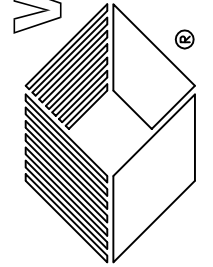

VIRON[®] INTERNATIONAL CORP.
 OWOSSO, MICHIGAN TEMPLE, TEXAS
 989-723-8255
 989-723-8417 FAX EMAIL: vironinfo@vironintl.com
 ENVIRONMENTAL CONTROL SYSTEMS

| | |
|----------|----------|
| USER | |
| REP. | |
| JOB NO. | |
| DATE | SHEET OF |
| DRAWN BY | |